

TabCabby

New thinking in ICT storage

Instructions

TabCabby Compact
Charge Only



TabCabby 20-32V



To UNLOCK front doors – turn the key located on top of the TabCabby, anti- clockwise according to diagram shown on lock moulding.

To UNLOCK rear door – push down the latch located on the inside panel on the side of the door. (See Fig. 1)

To UNLOCK side doors - pull on the door release pins located half way down on the insides of the rear door. The pins can only be accessed when rear door is open. (See Fig. 2)

To LOCK rear door – close the rear door first, this will lock automatically.

To LOCK front door – ensure back door is closed securely, close the front door. Turn key located on top of the TabCabby, clockwise according to diagram on lock moulding. This locks both the front and back doors securely. Back door **MUST** be closed prior to locking the front door.

To LOCK side doors - Push side doors to close these will lock automatically.



To install tablets into TabCabby:

1. Pull the shelf out and place tablets in the Caddys (5 tablets with protective cases in each basket, 8 tablets without cases)
2. Place power adapters in holders in the separate back compartment.
3. Pass power adapter cables through holes on back panel and push into clips to secure.
4. Pass power adaptor cable through hole in back panel and feed over the cable tray to position over tablet caddy.
5. Plug power cables into tablets and adjust cable length so drawer can be opened.
6. Plug mains plugs from adapters into power extension strips located on the left and right side panels.

TabCabby Compact Series - 16HC 32HC



To UNLOCK front doors – turn the key located on top of the TabCabby, anti- clockwise according to diagram shown on lock moulding.

To UNLOCK side doors - push down the latch located on the inside panel on the side of the door. (See Fig. 3)

To LOCK front door – ensure back door is closed securely, close the front door. Turn key located on top of the TabCabby, clockwise according to diagram on lock moulding. This locks both the front and back doors securely. Back door **MUST** be closed prior to locking the front door.

To LOCK side doors - Push side doors to close these will lock automatically.

To install tablets into TabCabby:

To install tablets/iPads into TabCabby 16H / 32H Compact:

1. Place tablet/iPad on the fixed shelves (2 tablets/iPads per tray)
2. Pass cable through the relative hole on side compartment moulding and use cable anchor inside moulding to secure the cables.
3. Plug the mains lead into power extension strips on the side panel.




Note: Front 2 castors have lockable wheels. Lock when TabCabby is in position by pushing down on the castor foot plate.

POWER 7 V2– Setting and Operating Instructions

Important Note: All laptops must be switched off and closed before charging.

When powering up the LapCabby / UniCabby for the first time, depending on your time zone, the unit might automatically enter a timing period, to ensure the LapCabby / UniCabby is in the correct time zone please follow the instructions below from item 2, or to reset 'Timers' follow instructions from 'Setting Timers' below.

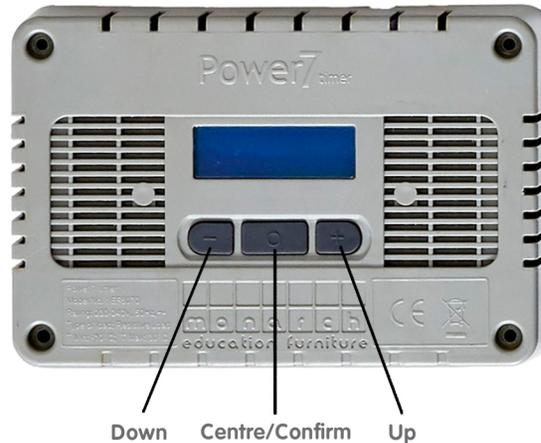

The Power 7 timer allows you to charge your devices to timing periods that are suitable to your individual needs. You have three timer functions available, these are:

Always on mode – Constant power to your devices all the time

Manual Charge mode – Deliver power to your devices at any time for a set amount for time

Timed Charge mode – Deliver power to you devices at a time suitable to your requirements for an amount of time suitable to you.

Using your trolley for the first time

Plug the trolley into a socket with the IEC cable supplied.

Setting Time & Date

When the Power 7 is powered up, the main screen will display the time and date. If the time and date is incorrect, this can be adjusted by following the next few steps.

- Press and hold the three control buttons for 5 seconds
- Set Clock? – Yes
- Use the + & - buttons to scroll through and select the correct date. Press the centre button to confirm
- Use the + & - buttons to scroll through and select the correct time. Press the centre button to confirm
- Clock setting is now complete

Always on mode

- Press and hold the centre button for 5 seconds
- Always on? – Yes
- The timer is now set in always on mode.
- To exit the always on mode, press and hold the centre button for 5 seconds
- Always on? – No
- Set manual time? – press the centre button to confirm
- Set timer 1? - Exit

Manual charge mode

- Press and hold the centre button for 5 seconds
- Always on? – No
- Use the + & - buttons to scroll through and select the required manual charge timer duration required to a maximum of 7 hrs 59 minutes. Press the centre button to confirm,
- Set Timer 1? – Exit
- Set timer is now set
- Press and hold the + & - buttons together for 5 seconds to start manual charging
- To exit manual charge mode, press and hold the central button for 5 seconds

Timed charge mode

- Press and hold the centre button for 5 seconds
- Always on? – No
- Set manual time – press the centre button
- Set timer 1? – Yes
- Select timer start time for Sunday using the + & - buttons to scroll through
- Use the + & - buttons to scroll through a suitable timing duration. If the timer is not required, press and hold the + & - buttons together to turn the timer off.
- Press the middle button to confirm
- Repeat the above process to programme timers for the rest of you week.
- The above process can be repeated for timer 2 and timer 3.

Important Note: A temperature sensor has been fitted to this LapCabby / UniCabby unit, power will cut out if the temperature inside the unit exceeds 35°C (95°F) and will resume charging at approximately 29°C (84°F)

General Safety Precautions

IMPORTANT: The socket outlet shall be installed or situated near the equipment and shall be easily accessible.

The TabCabby should never be used on any inclined surface. Never have more than two drawers in the open or loading position at any time.

Always ensure that all the doors are fully closed and locked and that the power has been disconnected before moving the TabCabby.
Forcing the front door beyond 90 degrees and the rear door beyond 100 degrees will cause damage to the hinges.

This unit is designed for storage and re-charging purposes only.
This unit is specifically designed for use with tablets and their factory supplied AC adaptors, they should not be used with any other equipment.
Do not leave the unit unattended in areas where children may have access.

The brakes on the castors should be operated to prevent movement and the doors should be locked and the key removed whenever the unit is parked, unattended or charging.
Always disconnect the TabCabby from the wall outlet before opening the doors or altering the AC adaptor configuration.

When the TabCabby is unplugged from the mains outlet you should ensure that the outlet is switched off wherever possible.

To avoid risk of electric shock or fire the unit should only be used by a competent adult.
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

The mains power lead must not be pulled on to move the TabCabby. When moving the TabCabby the mains cable should be stored inside the TabCabby to avoid damage.
Inspect the plug and power lead on a daily basis, if the plug and power lead is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

TabCabby units are supplied with two braked and two unbraked castors to allow you to move your TabCabby at any time and are intended for indoor use only (carpet, wood or tiled floors). Movement across bitumen, tarmac, concrete and rough surfaces is not recommended and doing so will void any warranty claims for damage to the wheels.
When moving your TabCabby between floors it is strongly recommended that the unit is transported via a lift or ramp. Do not wheel the TabCabby up/down stairs as this will cause damage to the unit.

The TabCabby and Power 7 should be used in a dry environment and at normal room temperatures. No water or moisture must be allowed into the unit. The TabCabby must not be used outdoors. The TabCabby should not be moved across any external areas unless the weather is warm and dry. If it is unavoidable then this should only be done in dry conditions and the TabCabby must be allowed to stand in normal room conditions for at least four hours before it is connected to any tablets or supply sockets.

The power extension strips inside this unit are to be used for the recharging of tablet computers only and no other purpose.
The use of the extension strips for recharging or powering any other equipment will invalidate the warranty (with the exception of factory fitted optional extras).

Safety Precautions for the Power 7 Timer

Important the **total** load on any power extension strip must not exceed 6amps and the **total** load on ALL power extension strips must not exceed 12amps.

Important the **total** load on any power extension strip must not exceed 6amps and the **total** load on ALL power extension strips and auxiliary socket when fitted must not exceed 12amps. (Auxiliary socket is a factory fit option)

Important - The Power 7 has a Lithium Manganese Battery backup for the timer functions, the Battery is permanently fixed to the PCB and is a factory replacement item. No attempt should be made under any circumstances to remove the battery from the circuit board any attempt to fit an incorrect type of Battery could lead to an explosion.

There are no serviceable parts in the Power 7 only trained personnel are allowed access to the inside of the Power 7 unit. Do not modify the unit in any way. Under no circumstances should the air vents on the TabCabby be covered. Under no circumstances should the air vents on the Power 7 be covered.

Before any cleaning of the plastic casing the plug must be removed from the mains socket. Cleaning of the plastic casing should only be done using a clean dry cloth. No liquid detergents or aerosol cleaners are to be used.

Technical Data Sheet

Degree of protection against ingress of solid objects, dust and water: **IPX0**

Degree of protection against electric shock: **Insulation-encased Class I control**

Degree of pollution: **2**

Nature of supply: ~

Rated mains supply voltage: **UK: 220-240V**
Aus: 230V
Euro: 230V
US: 115V
South Africa: 230V

Rated frequency: **UK: 50Hz**
Aus: 50Hz
Euro: 50Hz
US: 60Hz
South Africa: 50Hz

Max. current applies to TabCabby units with powerstrips only:

12A : Total load on all Power Extension Strips
6A : Total load on any single Power Extension Strip

Rated impulse to withstand voltage: **2.5KV**

Type of power connection:

UK: Detachable mains power lead with UK 3 pin plug and C19 Connector
Aus: Detachable mains power lead with Australia 3 pin plug and C13 Connector (AS/NZS 3112:2004)
Euro: Detachable mains power lead with Schuko type plug and C13 Connector
US: Detachable mains power lead with Nema 5 - 15P and C19 Connector
South Africa: Detachable mains power lead 15 amp round 3 pin plug and C19 Connector

Max. conductor size: **UK, Australian and Euro: 1.5 mm²**
US: 2.08mm²

Operating Temperature:

We recommend 5 degrees - 33 degrees Celsius, the unit will automatically switch off at 35 degrees Celsius and will switch back on at 29 degrees Celsius, this is to protect the Laptop Battery.

Cooling condition: Natural Convection plus automatic extractor fans.

Correct disposal of this product:



This marking indicates that this product should not be disposed with other household wastes throughout the EU, US and Australia. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

EQUIPMENT MUST BE SUPPLIED FROM EARTHED / GROUNDED SUPPLY

High Touch current can result from the summation of the touch currents of each of the devices plugged into the unit.
To protect against a hazard the connection to protective earth should be reliable. The equipment supply connection (mains plug, mains cable and inlet) must be annually inspected / checked for signs defects or excessive wear and replaced where necessary.



DANGER!
RISK OF ELECTRIC SHOCK
DANGER! ELECTRICAL CORDS
CAN BE HAZARDOUS
MISUSE CAN RESULT IN FIRE
OR DEATH BY ELECTRIC SHOCK